

# 5

---

## *AGP Retention Module*

### How To Uninstall AGP Card From AGP slot

1. Pull the lever to release the AGP card.



2. Remove AGP card from AGP slot.

